

DRYER CLEANING TIPS

CLEAN DIAL

CLEAN TOP PANEL

CLEAN TOP
SIDES
FRONT
BACK
DRUM, INSIDE

CLEAN BOTH
LINT
FILTERS

THE DOOR MUST
BE CLEAN,
INSIDE AND ALL
LINT REMOVED.



REFRIGERATOR CLEANING TIPS

BOTH FREEZER AND FRIDGE AREAS MUST BE TOTALLY EMPTY AND DOORS LEFT OPEN, WIPE DOWN ALL MOISTURE, REMOVE ALL DIRT

CLEAN INSIDE AND SHELVES TO INCLUDE DOOR SHELVES

ALL AREAS MUST BE THOROUGHLY CLEAN AND WIPED DRY TO PREVENT MOLD GROWTH.



CLEAN RUBBER SEALS
CLEAN RACKS
CLEAN ALL AREAS,
FRONT, BACK, COILS
CRISPER, DRAWERS
UNDER DRAWERS
DRIP PAN

MAKE SURE THE FRONT AND BACK ARE CLEAR OF DUST, SOME DRIP PANS ARE ON TOP OF THE COMPRESSOR IN THE BACK.

STOVE CLEANING TIPS

CLEAN TIMER
TOP FACING
UNDER AND AROUND
TOP FACE PLATE

REMOVE DIALS AND CLEAN
KNOBS, DIALS AND UNDER
DIALS

CLEAN SIDE PANELS

CLEAN COMPLETELY:
INSIDE OVEN, DOORS
BROILER AND PAN
INSIDE DRAWER



CLEAN UNDER AND
AROUND
BURNERS, LIFT UP AND
CLEAN UNDER BURNER
TOP

CLEAN OVEN LIGHT


CLEAN ALL HANDLES

CLEAN UNDER THE GRILL AND FRONT OF THE STOVE
DON'T FORGET TO CLEAN UNDER THE STOVE, IT GETS
DUSTY UNDER THERE.

WASHER CLEANING TIPS


WIPE DOWN TOP PANEL
CLEAN THE HINGES

CLEAN THE HANDLE

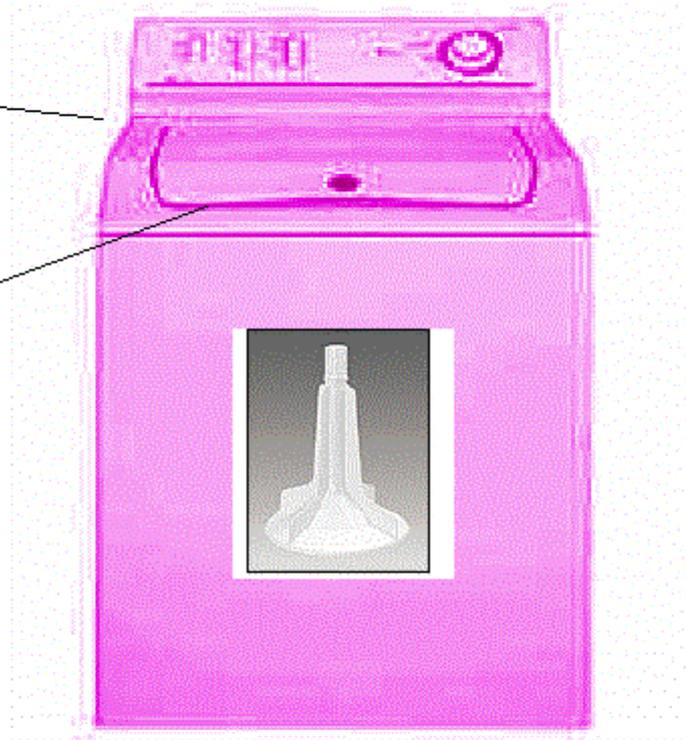

CLEAN THE CONTROLS

WIPE DOWN THE TOP,
SIDES, FRONT AND BACK
THE INSIDE MUST BE
CLEAN, REMOVE THE
AGITATOR, LINT FILTER
AND MAKE SURE THE
DRUM IS CLEAN.

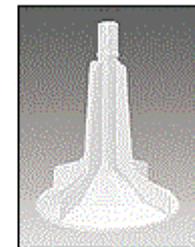

AGITATOR NORMALLY REMOVES
BY REMOVING THE SCREW ON TOP
OF THE COLUMN AND THEN IT
LIFTS OUT. REMEMBER TO CLEAN
UNDER THE AGITATOR.